

Neosys Technology Inc.

BIOS update manual

Published Apr. 6th, 2017

Page 1 of 4



Copyright © 2016 Neosys Technology Inc. All Right Reserved.

The Following Steps can help you to update BIOS.
Below shows *Nuvo-5000 series BIOS update* as an example.


DOC Environment

Please prepare a bootable DOS USB drive before starting your installation process.


Step 1-1: Please download BIOS files from above link.

Step 1-2: Create NV5KA005 folder including fparts.txt, Readme.txt, H2OFFT-D.exe, FPT.exe, NV5KA005.bin, f.bat, f2.bat, message.ini and platform.ini to the bootable DOS USB drive.

Below shows NV5KA005 folder as an example.

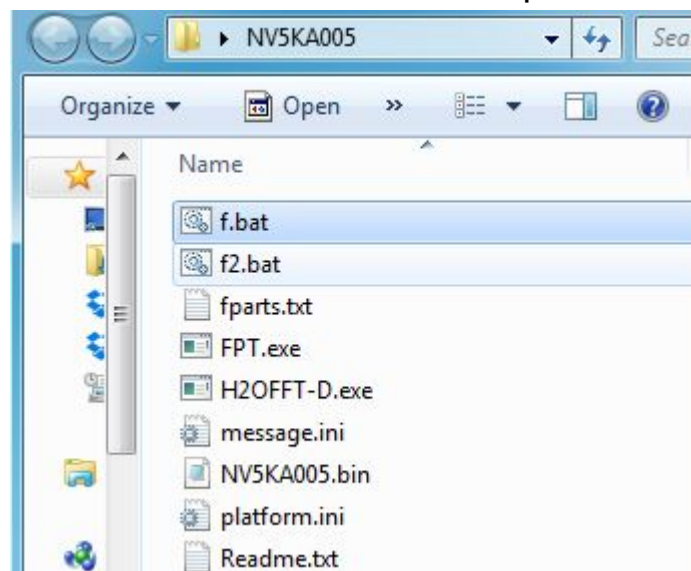

Step 2: Plug your USB drive into the USB port of Nuvo-5000 series, then power on the computer and press F12 to select USB drive as the booting device

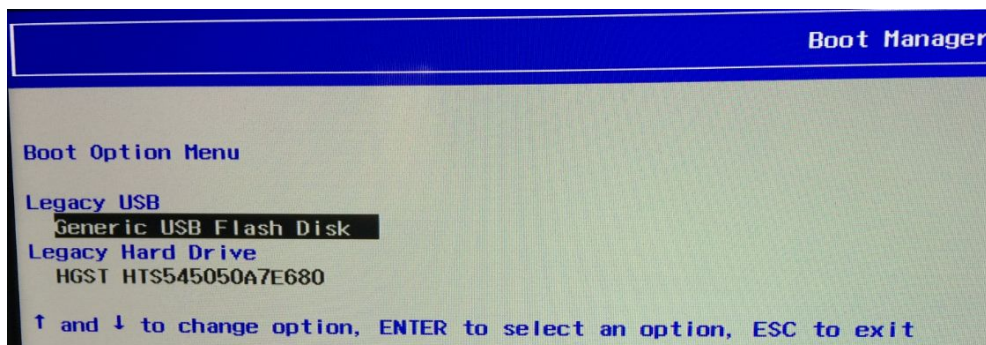

Step 3-1: Please key in 'cd NV5KA005' to switch to the folder after entering the DOS environment.

Step 3-2: Please key in 'f' to execute update.

```
Microsoft(R) Windows 98
(C)Copyright Microsoft Corp 1981-1999.

C:\>cd NV5KA005
C:\NV5KA005> f
C:\NV5KA005>H2OFFT-D.exe NV5KA003.bin -BIOS -ALL -CM
Read file successfully. (path="platform.ini")
Read file successfully. (path="message.ini")

Please do not remove the AC power

Insyde H2OFFT (Flash Firmware Tool) Version (SEG) 100.00.00.04
Copyright(c) 2012 - 2015, Insyde Software Corp. All Rights Reserved.
```

※Note:

If you use A001~A004 BIOS version now, please execute f.bat file to update your BIOS to latest version for Nuvo-5000.

If you use A005 BIOS version now and want to reflash BIOS again, please execute f2.bat file.

Step 4-1: Please **reboot** the Nuvo-5000 computer after flash has been updated completely.

```
Insyde H2OFFT (Flash Firmware Tool) Version (SEG) 100.00.00.04
Copyright(c) 2012 - 2015, Insyde Software Corp. All Rights Reserved.

      Initializing
      File loading   100 %

Current BIOS Model name: Nuvo-5000 Series
New     BIOS Model name: Nuvo-5000 Series

Current BIOS version: NV5KA003.Build160318
New     BIOS version: NV5KA005.Build161125

      Updating Block at FFFFF000h
      0%      25%      50%      75%      100%
      [Progress bar showing 100% completion]
Flash complete!
```



Step 4-2: Press “F2” to enter BIOS setup utility during POST stage.

Step 4-3: Press “F9” to “Load Optimal Defaults”. Configure previous configuration. Ex. AHCI mode, Wake on LAN, Power on after power failure. If no specific setup, skip this step.

Step 4-4: Press “F10” to save and exit.

Attention:

If any error was observed during updating BIOS, please run it again.

Incomplete updating process will cause system fail to boot.

During updating BIOS, please DON'T power off or Remove AC power.

